

Vixen Co., Ltd.
<http://www.vixen.co.jp>

5-17-3 Higashitokorozawa, Tokorozawa, Saitama 359-0021, Japan
 Phone +81-4-2944-4141(International)
 Fax +81-4-2944-9722(International)

Vixen Europe GmbH
<http://www.vixen-europe.com>

Kleinhülsen 16/18, D-40721 Hilden, Germany
 Phone +49(0)2103-89787-0
 Fax +49(0)2103-89787-29




Preface

Thank you for your purchase of a Vixen 50mm XY Finder Bracket II.

- The 50mm XY finder bracket II is used in conjunction with a Vixen 7x50mm finder scope with illuminated reticle.
- These instructions apply to the 50mm XY Finder Bracket II. For instructions on attaching the bracket to your telescope, refer to your telescope instruction manual.


- The 50mm XY Finder Bracket II is not available for a finder bracket shoe that is attached to the optical tube with a single screw as shown on the right.

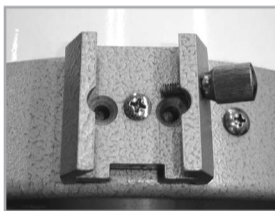

Checking Contents

Make sure that your box contains the following parts.

- 50mm XY Finder Bracket II
- Rubber O ring
- This instruction manual

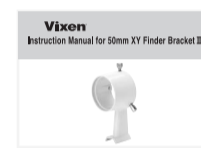

Instruction manual



O ring



50mm XY Finder Bracket II


Safety Precautions

Read this instruction manual thoroughly before using the XY Finder Bracket II.


- Always keep the instruction manual near your telescope to ensure quick answers to any questions.
- This instruction manual describes necessary precautions for the safe use of the product to prevent possible injuries to yourself and others, as well as damage to the equipment.

Setting Up the 50mm XY Finder Bracket II (Installing the Finder Scope)


- Slide the O ring onto the eyepiece end of the finder scope.

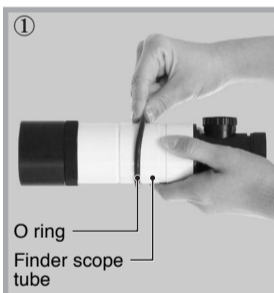

- Position the O ring on the eyepiece end of the finder scope about 6mm from the groove as shown in the figure. Make sure that the O ring does not get twisted and is set in place.

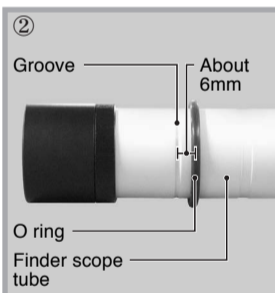


- Back out the adjustment screw on the finder bracket to allow a passage of the finder scope.

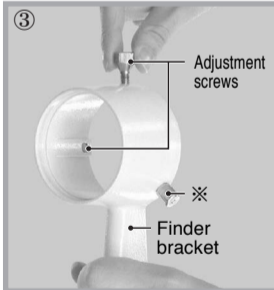


- ※ Pull up the fixed stud on the bracket ring and pull it so that the finder tube slides into the bracket ring from its eyepiece end.

- Insert the finder scope into the finder bracket from its eyepiece end until the O ring comes in contact with the finder bracket.

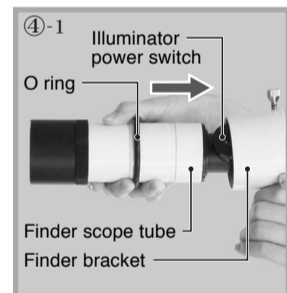


Make sure that the finder scope is situated so that the power switch for the illuminator is accessible.

Much care should be taken to avoid scratching the surface of the finder scope tube with the inside of the finder bracket.

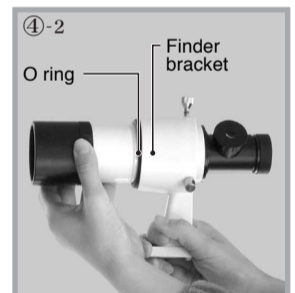

- While holding the finder scope in one hand, push the finder bracket onto the finder scope so the O ring is rolled into it.

As you push the finder bracket in short increments, the O ring should fit snugly. When you release the finder bracket, be sure that it is no longer being pushed back by the O ring.

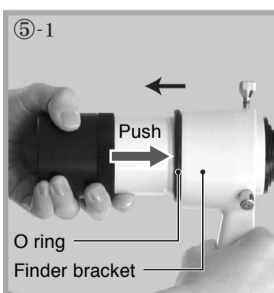

- Tighten the two adjustment screws evenly so that the finder scope is set properly on the finder bracket. Attach the finder bracket onto your telescope according to the telescope's instruction manual.

